



	Originale	Sostituto
	Power	Power
	Vol+	Vol+
	CH+	CH+ / Page+
	Vol-	Vol-
	CH-	CH- / Page-
	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	0	0
	-/--	Guide / EPG / -/--
	0	0
	A	Red / Netflix / Search

	Originale	Sostituto
	B	Green / APP / Repeat
	C	Yellow / YouTube / Repeat
	D	Blue / Prime Video / Random





Originale	Sostituto
Power	Power
ShowView	Shift + Display / Media
AV	AV / Input / RDS
Direct Tv Rec	TV/Radio /
Rec	Rec / Rec Mode
1	1
2	2
3	3
CH+	CH+ / Page+
4	4
5	5
6	6
CH-	CH- / Page-
7	7
8	8
9	9
Vol+	Vol+

Originale	Sostituto
Cancel	Exit / Cancel / Clear
0	0
-/--	Guide / EPG / -/--
Vol-	Vol-
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
<< Slow/Search	<< / Tune-
Slow/Search >>	>> / Tune+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play/x1.3	Play / Slow
Top Menu/Direct Navigator	D.Menu / Top
Up	Up
Menu/Play List	Menu / Home
Left	Left
Enter	OK
Right	Right





Originale	Sostituto
Functions	Setup / OPT /
Down	Down
Return	Back / Return
Prog/Check	+ Shift + Fav / Marker / PC
Timer	Sleep / Timer
Manual Skip	Smart / List
Time Slip	+ Shift + Sleep / Timer
F.Rec	Red / Netflix / Search
Rec Mode	+ Shift + Rec / Rec Mode
< Frame	+ Shift + << /
Frame II>	+ Shift + >> /
A/Input Select	Yellow / YouTube / Repeat
B/Status	+ Shift + AV / Input / RDS
C/AV Link	Picture / Format
D/Display	Display / Media
Erase	Text / Goto
Audio	Audio / Lang I/II

Originale	Sostituto
Position	+ Shift + Smart / List
Marker	Fav / Marker / PC

