 

 
 

 

 

 

 

 
 

 

 

 

 

 


 
 
 
 
 
 
 
 
 
 
 
 
 
 

 










Originale		Sostituto		Originale		Sostituto	
	Power		Power		8		8
	Mute		Mute		9		9
	Vol+		Vol +		0		0
	Vol-		Vol -		-/--		Shift + Guide
	Prog+		Ch +		PRE		Pre Ch
	Prog-		Ch -		Up/P+		Up
	[≡]/TXT		Text		Down/P-		Down
	[+]/Display		Info		Right/Vol+		Right
	Tv/DVB-T		Smart		Left/Vol-		Left
	[]/Line		Media		[II]/Tv Menu		Menu
	1		1		-IXI-/Exit		Exit
	2		2		Timer/Sleep		Shift + Power
	3		3		-I/I-/P.STD		Shift + Format
	4		4		-I/I-/S.STD		Shift + Dual
	5		5		[<>]/P.Size		Format
	6		6		Open/Close		Eject
	7		7		Rec		Rec





Originale	Sostituto
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 <</< Slow	 <<
 Slow >/>>	 >>
 <</< Step	 <<
 Step >/>>	 >>
 Red/Setup	 Red
 Green/Input	 Green
 Yellow/Title	 Yellow
 Blue/Menu	 Blue
 PIP On/Off	 Shift + 3D
 PIP Source	 Shift + AV
 PIP Sound	 Shift + TV/R
 PIP Swap	 Shift + Subt
 Timer/repeat	 Shift + Text
 [≡i]/A-B	 Shift + Info

Originale	Sostituto
 [/≡]/Audio	 Dual
 [≡♦]/Subtitle	 Subt
 [≡?]/Goto	 Options
 [≡+]/Program/Me	 TV/R
 [<≡]/List/Angle	 Shift + Ch -
 [≡>]/Bookmark/O	 Shift + Ch +
 [≡o]/Zoom/EPG	 Guide
 [≡X]/Cancel/i	 3D
 MS	 Back
 [▼]/Still	 AV
 OK	 Ok

