 

 



 
 
 

 

 

 





Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 CD	 2
 FM	 1
 USB/Audio In	 3
 Preset/Album Up	 Up
 Preset/Album Down	 Down
 >>I	 >>I
 >>I	 Right
 I<<	 I<<
 I<<	 Left
 Pause	 Pause
 Play	 Play
 Play/Pause	 Ok
 Stop	 Stop
 Vol+	 Vol +
 Vol-	 Vol -

Originale	Sostituto
 Mute	 Mute
 Repeat	 Text
 Shuffle	 Guide
 Display	 Info
 Prog	 Sleep
 Sound	 Dual
 Clock	 AV
 Sleep/Timer	 Smart

