


 

 

 





















 



 








 



Originale	Sostituto
 Power	 Power
 DVD (Universal Mode)	 Shift + 2
 STB (Universal Mode)	 Shift + 3
 HTS (Universal Mode)	 Shift + 4
 Red/Demo	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow/[ I ]	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Home	 Menu / Home
 Guide	 Guide / EPG / -/--
 Options	 Setup / OPT /
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
Down	Down

Originale	Sostituto
 [i]/Info	 Info / Angle
 <<	 << / Tune-
 Play/Pause	 Play / Slow
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+
 Vol-	 Vol-
 [<>]/Format	 Picture / Format
 PR-	 CH- / Page-
 Net TV	 Smart / List
 Teletext	 Text / Goto
 Disc Menu	 D.Menu / Top
 1	 1
2	2





Originale	Sostituto
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Subtitle	 Subtitle / EQ
 0	 0
 Source	 AV / Input / RDS
 Ambilight	 Display / Media

Originale	Sostituto

