









 

 








Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Title/Return	 Back / Return
 Title/Return	 Sound / Title
 0	 0
 Display	 Display / Media
 Disc Menu	 D.Menu / Top
 Up	 Up
 System Menu	 Menu / Home

Originale	Sostituto
 Left	 Left
 OK	 OK
 Right	 Right
 I<<	 I<< / Preset-
 Down	 Down
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Zoom	 Zoom / Size
 Audio	 Audio / Lang I/II
 Repeat	 Green / APP / Repeat
 Repeat A-B	 Yellow / YouTube / Repeat
 Preview	 Smart / List
 Mute	 Mute / Dimmer

