



Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 DVD Menu	 D. Menu
 OSD Menu	 Menu
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right

Originale	Sostituto
 Left	 Left
 OK	 Ok
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 [...]	 Subt
 :>	 Format
 T-C	 TV/R
 Audio	 Dual
 Zoom	 Eject
 Repeat	 Text
 A-B Repeat	 Options
 Shuffle	 AV
 Play	 Play
 Stop	 Stop
 Pause	 Pause





	Originale	Sostituto		Sostituto
	>>		>>	
	<<		<<	
	>		>	
	<		<<	

Originale	Sostituto

