

 















 



 







 













 



 



 













 





Originale		Sostituto		Originale		Sostituto	
	Power		Power		OK		OK
	Stop		Stop / Hold		Right		Right
	Pause		Pause / Step / Freeze		CH+ />I		CH+ / Page+
	Rec		Rec / Rec Mode		Down		Down
	<<		<< / Tune-		Source		AV / Input / RDS
	Play		Play / Slow		Back		Back / Return
	>>		>> / Tune+		Options		Setup / OPT /
	Red		Red / Netflix / Search		Vol-		Vol-
	Green		Green / APP / Repeat		Mute		Mute / Dimmer
	Yellow		Yellow / YouTube / Repeat		Vol+		Vol+
	Blue		Blue / Prime Video / Random		1		1
	Find		Shift + Red / Netflix /		2		2
	Home		Menu / Home		3		3
	Adjust		Smart / List		4		4
	Up		Up		5		5
	CH-/I<		CH- / Page-		6		6
	Left		Left		7		7



