



 



 

 
 
 

 





 







 

 

 

 







Originale	Sostituto
 Power	 Power
 Teletext	 Text / Goto
 I-II/Dual	 Audio / Lang I/II
 [\leftarrow]/[+]	 TV/Radio /
 AV/[?]	 AV / Input / RDS
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [...] / Subtitle	 Subtitle / EQ
 [I] / Dual / Window	 Display / Media
 Cancel	 Exit / Cancel / Clear
 Option	 Setup / OPT /
 Menu Analog	 Menu / Home
 Menu Digital	 D.Menu / Top
 Up	 Up
 Left	 Left

Originale	Sostituto
 OK	 OK
 Right	 Right
 Down	 Down
 Analog/Digital	 Shift + D.Menu / Top Menu
 EPG	 Guide / EPG / -/-
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7



