










 


 

 





 




 
 
 







Originale	Sostituto
 Power	 Power
 Eject	 Eject
 USB	 Media
 Radio	 TV/R
 Aux/Di/MP3 Link	 AV
 HDMI	 Pre Ch
 Disc	 Menu
 Info	 Info
 Back/Title	 Back
 Options	 Options
 Up	 Up
 Down	 Down
 Right/>>>	 Right
 Left/;<<	 Left
 OK	 Ok
 I<	 I<<
 Play	 Play

Originale	Sostituto
 Pause	 Pause
 >	 >>
 Stop	 Stop
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Treble	 Ch +
 Bass	 Ch -
 Ambisound	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





Originale		Sostituto	
	9		9
	0		0
	Subtitle		Subt
	Audio Sync		Format
	Zoom		Shift + Eject
	Angle		Sleep
	Repeat/Program		Text
	Sound		Dual

Originale		Sostituto	

