
 




 







 
 
 
 

 







Originale	Sostituto
 Power	 Power
 Stop	 Stop
 Pause	 Pause
 Rec	 Rec
 <<<	 <<<
 Play	 Play
 >>>	 >>>
 Source	 AV
 [ ] / TV	 TV/R
 [<>] / Format	 Format
 Home	 Smart
 Smart TV	 Media
 List	 List
 [i] / Info	 Info
 Adjust	 D. Menu
 Options	 Options
 Back	 Back

Originale	Sostituto
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 CH +	 Ch +
 CH -	 Ch -
 Vol +	 Vol +
 Vol -	 Vol -
 Mute	 Mute
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 1	 1
 2	 2
 3	 3



