



Originale	Sostituto
Power	Power
CD	1
Bluetooth/Pairing	2
FM	3
USB/Audio In	4
I<<	I<<
Play	Play
Pause	Pause
>>I	>>I
Stop	Stop
>>	GUIDE
Recall	Pre Ch
Album/Preset +	Ch +
Album/Preset -	Ch -
Vol+	Vol +
Vol-	Vol -
Mute	Mute

Originale	Sostituto
Sound	Dual
Display	Info
Prog	Sleep
Sleep/Timer	AV
Clock/Scan	Media

