















 























 

 

 

 







 

 

 

 



Originale	Sostituto
 Power	 Power
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 USB	 Shift + 8
 Search	 Shift + Green / APP /
 */Settings	 Setup / OPT /
 Tv Guide	 Guide / EPG / -/--
 List	 Shift + Smart / List
 Sources	 AV / Input / RDS
 Smart Tv	 Smart / List
 Home	 Menu / Home
 Exit/TV	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search

Originale	Sostituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 i	 Info / Angle
 Up	 Up
 Options	 Shift + Setup / OPT / Tools
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 [<>]	 Picture / Format
 Vol+	 Vol+
 Netflix	 Shift + Red / Netflix /
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer





Originale	Sostituto	Originale	Sostituto
 CH-	 CH- / Page-		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 Subtitle	 Subtitle / EQ		
 0	 0		
 Text	 Text / Goto		

