 



 

 

 
 
 
 
 
 
 
 
 

 
 
 

 

 
 
 
 

 

 
 








Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 Menu/Disc	 Menu
 Setup	 Options
 Back	 Back
 Info	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 >>	 >>
 <<	 <<
 I<	 I<<
 Play	 Play
 Pause	 Pause
 >I	 >>I

Originale	Sostituto
 Stop	 Stop
 USB	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Subtitle	 Subt
 Audio/Create MP3	 Dual
 [<>]/Zoom	 Format
 Repeat	 Text
 Repeat A-B	 +  Shift + Text

