



Originale	Sostituto
 Power	 Power
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Guide	 Guide / EPG / -/--
 0	 0
 Infos	 Info / Angle
 Vol +	 Vol+
 Mute	 Mute / Dimmer
 Prog +	 CH+ / Page+

Originale	Sostituto
 Vol -	 Vol-
 Format	 Picture / Format
 Prog -	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Media	 Display / Media
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 AD	 Audio / Lang I/II





	Originale	Sostituto	Originale	Sostituto
	Subtitles	 Subtitle / EQ		
	Text	 Text / Goto		
	Radio	 TV/Radio /		
	l<<	 l<< / Preset-		
	<<	 << / Tune-		
	>>	 >> / Tune+		
	>>	 >> / Preset+		
	Rec	 Rec / Rec Mode		
	Stop	 Stop / Hold		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		

