 
 
 






 

 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Pause	 Pause
 Ambilight	 Options	 Rec	 Rec
 *	 Menu	 Red	 Red
 Colors	 Info	 Green	 Green
 Sources/Pair	 AV	 Yellow	 Yellow
 Up	 Up	 Blue	 Blue
 Down	 Down	 Vol+	 Vol +
 Right	 Right	 Vol-	 Vol -
 Left	 Left	 Mute	 Mute
 OK	 Ok	 Netflix	 Media
 ←	 Back	 Windows	 D. Menu
 Home	 Smart	 CH+	 Ch +
 +	 Pre Ch	 CH-	 Ch -
 <<	 <<	 Rakuten Tv	 TV/R
 Play	 Play	 Exit TV	 Exit
 >>	 >>	 1	 1
 Stop	 Stop	 2	 2





Originale		Sostituto		Originale		Sostituto	
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Text		Text				
	TV Guide/List		Guide				

