


 


 



 







Originale	Sostituto
 Standby	 Power
 Record	 Rec
 SV/V+	 AV
 Timer	 Shift + AV
 Timer	 Sleep
 Clear	 Exit
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 <<	 <<

Originale	Sostituto
 >>	 >>
 Stop	 Stop
 Play	 Play
 Up / P +	 Up
 Up / P +	 Ch +
 Down / P -	 Down
 Down / P -	 Ch -
 Right / Vol +	 Right
 Right / Vol +	 Vol +
 Left / Vol -	 Left
 Left / Vol -	 Vol -
 Mute	 Mute
 Menu	 Menu
 OK	 Ok
 > / Index	 Info
 > / Index	 >>
 [X]	 Back



