












 





















 





 

 

 








Originale	Sostituto
Power	Power
Open/Close	Eject
USB	Blue
CD	Yellow
Tuner	Green
AUX	Red
Vol-	Vol -
Vol+	Vol +
I<<	I<<
>>I	>>I
Album/Preset	Ch -
Album/Preset	Ch +
Stop	Stop
Play / Pause	Play
Play / Pause	Pause
Program	SHIFT + SLEEP Shift + Sleep
Clock/Display	INFO Info

Originale	Sostituto
Timer	AV AV
Sleep	SLEEP Sleep
DBB	DUAL Dual
DSC	AD SUBT Subt
RDS/News	SEARCH TVR TV/R
Mute	MUTE Mute
Repeat	REPEAT TEXT Text
Shuffle	PICTURE FORMAT Format













 


























 

 



 
Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 USB	 Blue
 CD	 Yellow
 Tuner	 Green
 AUX	 Red
 Vol-	 Vol -
 Vol+	 Vol +
 I<<	 I<<
 >>I	 >>I
 Album/Presets	 Ch -
 Album/Presets	 Ch +
 Stop	 Stop
 Play / Pause	 Play
 Play / Pause	 Pause
 Program	 Shift + Sleep
 Clock/Display	 Info

Originale	Sostituto
 Timer	 AV
 Sleep	 Sleep
 DBB	 Dual
 DSC	 Subt
 RDS/News	 TV/R
 Mute	 Mute
 Repeat	 Text
 Shuffle	 Format



 
 
 
 







 




 
 


Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 USB	 Blue
 CD	 Yellow
 Tuner	 Green
 AUX	 Red
 Vol-	 Vol -
 Vol+	 Vol +
 I<<	 I<<
 >>I	 >>I
 Album/Preset	 Ch -
 Album/Preset	 Ch +
 Stop	 Stop
 Program	 +  Shift + Sleep
 Clock/Display	 Info
 Timer	 AV
 Sleep	 Sleep

Originale	Sostituto
 DBB	 Dual
 DSC	 Subt
 RDS/News	 TV/R
 Mute	 Mute





Originale	Sostituto
 USB	 Blue
 CD	 Yellow
 Tuner	 Green
 AUX	 Red
 Open/Close	 Eject
 Power	 Power
 Vol+	 Vol +
 Vol-	 Vol -
 Clock/Display	 Info
 Timer	 AV
 Sleep	 Sleep
 DBB	 Dual
 DSC	 Subt
 RDS/News	 TV/R
 Mute	 Mute

Originale	Sostituto

