 
 

 
 

 



 

 

 
 

 
 
 

 




Originale	Sostituto
 Power	 Power
 ARC/HDMI	 List
 HDMI 1	 Exit
 HDMI 2	 Menu
 Bluetooth	 Ok
 Optical	 Up
 Aux	 Down
 Audio In	 Left
 Coax	 Right
 USB	 AV
 Mute	 Mute
 Back	 Back
 Sound	 Dual
 Surr	 Options
 Play/Pause	 Play
 I<	 I<<
 >I	 >>I

Originale	Sostituto
 Auto Vol	 Sleep
 Dim	 Subt
 Night Mode	 Format
 Vol+	 Vol +
 Vol-	 Vol -
 Audio Sync +	 Ch +
 Audio Sync -	 Ch -
 Treble+	 2
 Treble-	 1
 Bass-	 4
 Bass	 5

