





| Originale | Sostituto |
|--|---|
|  Power CD |  Power |
|  CD |  Yellow |
|  Play |  Play |
|  AUX |  Red |
|  VCR |  Smart |
|  TV |  Media |
|  Tuner |  Green |
|  Tape |  Blue |
|  Display |  Info |
|  Mute |  Mute |
|  DBB |  Guide |
|  DSC |  Pre Ch |
|  Sleep |  Sleep |
|  Shuffle |  Options |
|  Volume+ |  Vol + |
|  Volume- |  Vol - |
|  Brightness |  Subt |

| Originale | Sostituto |
|---|---|
|  Stop CD |  Stop |
|  Next >I CD |  >>I |
|  I< Prev. CD |  I<< |
|  Pause CD |  Pause |
|  >> CD |  >> |
|  << CD |  << |
|  Tv Vol+ |  Right |
|  Tv Vol- |  Left |
|  Power AUX |  Shift + Power |
|  Power TV |  TV/R |





| Originale | Sostituto |
|---|---|
|  Tape |  Blue |
|  Power Tape |  Power |
|  CD |  Yellow |
|  Tuner |  Green |
|  AUX |  Red |
|  VCR |  Smart |
|  TV |  Media |
|  Side Tape |  Dual |
|  Mute |  Mute |
|  Volume + |  Vol + |
|  Volume - |  Vol - |
|  Play Tape |  Play |
|  Stop Tape |  Stop |
|  Next >I Tape |  >>I |
|  << Tape |  << |
|  I< Prev. Tape |  I<< |
|  Pause Tape |  Pause |

| Originale | Sostituto |
|---|--|
|  >> Tape |  >> |

