



| Originale | Sostituto |
|------------|-----------|
| Power DVD | Power |
| Display | Info |
| SYS Video | Back |
| On/Off PBC | Media |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| +10 | Guide |
| Title | Pre Ch |
| Repeat | Text |

| Originale | Sostituto |
|-------------|-----------|
| A-B/Repeat | Options |
| Clear | Exit |
| FTS/Program | Sleep |
| Menu System | Menu |
| Menu Disc | D. Menu |
| Up | Up |
| Down | Down |
| Right | Right |
| Left | Left |
| OK | Ok |
| Stop/Return | Stop |
| Play | Play |
| Pause | Pause |
| >> | >> |
| << | << |
| > | >> |
| < | << |



