



Originale	Sostituto
 Power	 Power
 [i+]/Search	 Info
 [i+]/Search	 TV/R
 [X]/Mark	 Pre Ch
 [..≡]/Zoom	 Options
 [..≡]/Zoom	 Shift + Eject
 [≡] / DVD Menu	 D. Menu
 [≡] / DVD Menu	 Text
 [?]/Subtitle	 Exit
 [] / A-B	 List
 [↓] / Repeat	 Shift + Text
 [◀▶] / Clear	 Format
 <<Fast	 <<
 >>Fast	 >>
 <<Skip	 I<<
 >>Skip	 >>I
 Stop/Eject	 Stop

Originale	Sostituto
 Stop/Eject	 Eject
 Pause/Play	 Play
 Pause/Play	 Pause
 Menu	 Menu
 OK	 Ok
 Up	 Up
 Left	 Left
 Right	 Right
 Down	 Down
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 Red/Audio I-II	 Red
 Red/Audio I-II	 Dual
 Green / J	 Green





Originale	Sostituto
 Green / ♪	 +  Shift + Dual
 Yellow / □	 Yellow
 Yellow / □	 +  Shift + Format
 Blue / TV/DVD	 Blue
 Blue / TV/DVD	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 □→	 AV
 P<P	 Back

Originale	Sostituto

