


 




 








 









 





 



 

 




 







 

 




 

 










Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up	 Up
 [i+]	 DISPLAY INFO	 Left	 Left
 Text ↑ / Stop	 Stop	 OK	 Ok
 Text ↑ / Stop	 Shift + CH +	 Right	 Right
 Text ↑ / Stop	 REPEAT TEXT	 Down	 Down
 Red / <<<	 <<<	 Exit	 CLEAR EXIT
 Red / <<<	 Red	 Back	 RETURN BACK
 Green / Pause	 Pause	 Vol+	 Vol +
 Green / Pause	 Green	 Vol-	 Vol -
 Yellow / Opt / Play	 SETTINGS OPT	 Mute	 MUTE
 Yellow / Opt / Play	 Yellow	 P+	 Ch +
 Yellow / Opt / Play	 PLAY MODE	 P-	 Ch -
 Blue ↓ / >>>	 Blue	 1	 1
 Blue ↓ / >>>	 >>>	 2	 2
 Blue ↓ / >>>	 Shift + CH -	 3	 3
 EPG	 GUIDE	 4	 4
 List	 DISC NAV LIST	 5	 5





 
 




 








 



 









 

 










 

 
 




 


 



 










Originale	Sostituto
	6
	7
	8
	9
	0
	I-II
	TV / Radio
	[_]
	V-Format
	V-Output
	[< >]
	Menu
	Timer
	Dual
	TV/R
	Subt
	Format
	AV
	Shift + Format
	Menu
	Shift + AV

Originale	Sostituto





Originale		Sostituto		Originale		Sostituto	
	Power		Power		OK		Ok
	[i+]		Info		Right		Right
	Text ↑ / Stop		Stop		Down		Down
	Text ↑ / Stop		Shift + Ch +		Exit		Exit
	Text ↑ / Stop		Text		Back		Back
	Red / <<<		Red		Vol+		Vol +
	Red / <<<		<<<		Vol-		Vol -
	Green / Pause		Pause		Mute		Mute
	Green / Pause		Green		P+		Ch +
	Yellow / Opt / Play		Yellow		P-		Ch -
	Yellow / Opt / Play		Options		1		1
	Yellow / Opt / Play		Play		2		2
	Blue ↓ / >>>		Blue		3		3
	Blue ↓ / >>>		>>>		4		4
	Blue ↓ / >>>		Shift + Ch -		5		5
	Up		Up		6		6
	Left		Left		7		7







 

 



 



















 


 














 



 








 





 


 










Originale		Sostituto		Originale		Sostituto	
	8		8				
	9		9				
	0		0				
	V-Output		AV				
	[< >]		Format				
	Menu		Menu				
	I-II		Dual				





Originale		Sostituto		Originale		Sostituto	
	DVD Power		Power		DVD Down		Down
	VCR Power	 + 	Shift + Power		DVD Exit		Exit
	DVD [i+]		Info		DVD Vol+		Vol +
	VCR Stop	 + 	Shift + Stop		DVD Vol-		Vol -
	DVD Stop		Stop		VCR Mute	 + 	Shift + Mute
	VCR <<	 + 	Shift + <<		DVD Mute		Mute
	DVD <<		<<		DVD P+		Ch +
	VCR Pause	 + 	Shift + Pause		VCR P+	 + 	Shift + Ch +
	DVD Pause		Pause		DVD P-		Ch -
	VCR Play	 + 	Shift + Play		VCR P-	 + 	Shift + Ch -
	DVD Play		Play		DVD 1		1
	DVD >>		>>		VCR 1	 + 	Shift + 1
	VCR >>	 + 	Shift + >>		DVD 2		2
	DVD Up		Up		VCR 2	 + 	Shift + 2
	DVD Left		Left		VCR 3	 + 	Shift + 3
	DVD OK		Ok		DVD 3		3
	DVD Right		Right		DVD 4		4






 





 



 



 



 

 


 
 


 

 










 







 






Originale		Sostituto	
4	VCR 4	+	Shift + 4
5	DVD 5		5
5	VCR 5	+	Shift + 5
6	DVD 6		6
6	VCR 6	+	Shift + 6
7	VCR 7	+	Shift + 7
7	DVD 7		7
8	DVD 8		8
8	VCR 8	+	Shift + 8
9	DVD 9		9
9	VCR 9	+	Shift + 9
0	VCR 0	+	Shift + 0
0	DVD 0		0
I-II	VCR I-II		Dual
DVD [_]			Subt
V-Output	VCR V-Output	+	Shift + AV
V-Output	DVD V-Output		AV

Originale		Sostituto	
DVD [< >]			Format
VCR [< >]		+	Shift + Format
DVD Menu			Menu





Originale		Sostituto		Originale		Sostituto	
	Power		Power		3		3
	<<		<<		4		4
	Pause		Pause		5		5
	Play		Play		6		6
	>>		>>		7		7
	Up		Up		8		8
	Left		Left		9		9
	OK		Ok		0		0
	Right		Right		V-Output		AV
	Down		Down		[< >]		Format
	Vol+		Vol +		Menu		Menu
	Vol-		Vol -				
	Mute		Mute				
	P+		Ch +				
	P-		Ch -				
	1		1				
	2		2				

