 
 
 



 











 

 












Originale	Sostituto	Originale	Sostituto
 RC / Remote	 Smart	 OK	 Ok
 M / Menu	 Menu	 Mute	 Mute
 Power	 Power	 A / Audio	 Dual
 F / Favourites	 Pre Ch	 R / Radio	 Shift + TV/R
 E / Exit	 Exit	 1	 1
 i / Info	 Info	 2	 2
 ⊖ / Timer	 Sleep	 3	 3
 ⊖ / Timer	 AV	 4	 4
 TV	 TV/R	 5	 5
 Up / P+	 Up	 6	 6
 Up / P+	 Ch +	 7	 7
 Down / P-	 Down	 8	 8
 Down / P-	 Ch -	 9	 9
 Right / Vol+	 Right	 0	 0
 Right / Vol+	 Vol +		
 Left / Vol-	 Left		
 Left / Vol-	 Vol -		

Originale	Sostituto	Originale	Sostituto
 OK	 Ok	 Mute	 Mute
 A / Audio	 Dual	 R / Radio	 Shift + TV/R
 1	 1	 2	 2
 3	 3	 4	 4
 5	 5	 6	 6
 7	 7	 8	 8
 9	 9	 0	 0

