 

 

 

 

 

 

 

 

 

 

 

 

 
 
 
 




Originale	Sostituto
 Power	 Power
 Disc/Menu	 Menu / Home
 Eject	 Eject / Surround
 Display	 Display / Media
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Return/Title	 Back / Return
 Setup	 Setup / OPT /
 I<<	 I<< / Preset-
 Play/Pause	 Play / Slow
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 USB	 Shift + 8
 1	 1

Originale	Sostituto
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Subtitle	 Subtitle / EQ
 Audio/Create MP3	 Audio / Lang I/II
 Zoom	 Zoom / Size
 Repeat	 Green / APP / Repeat
 Repeat A-B	 Yellow / YouTube / Repeat

