

 













 





 















Originale	Sostituto
 Power	 Power
 i	 Info / Angle
 Sources	 AV / Input / RDS
 Up	 Up
 Search	 Shift + Red / Netflix /
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 ←	 Back / Return
 Home	 Menu / Home
 =	 Setup / OPT /
 <<<	 <<< / Tune-
 ▶	 Play / Slow
 >>>	 >>> / Tune+
 ■	 Stop / Hold
 ⏸	 Pause / Step / Freeze

Originale	Sostituto
 Rec	 Rec / Rec Mode
 Netflix	 Smart / List
 Windows	 Display / Media
 Rakuten Tv	 TV/Radio /
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Exit/TV	 Exit / Cancel / Clear
 Text	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Originale		Sostituto	
	7		7
	8		8
	9		9
	0		0
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Tv Guide		Guide / EPG / -/--

Originale		Sostituto	

