








 










 

 













 

 



 





 







Originale	Sostituto
 Power	 Power
 Mode	 Picture / Format
 Scan	 Smart / List
 DIM	 D.Menu / Top
 Timer	 Shift + Sleep / Timer
 Eject	 Eject / Surround
 Sleep	 Sleep / Timer
 Menu	 Menu / Home
 RDS/Info	 Info / Angle
 Album Up	 Up
 Album Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 I<	 I<< / Preset-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze



 





 
 


Originale	Sostituto
 Stop	 Stop / Hold
 >	 >>  / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Loudness	 Subtitle / EQ
 Clock	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Treble	 CH+ / Page+
 Bass	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6











































Originale	Sostituto
 Power	 Power
 Mode	 Picture / Format
 Scan	 Smart / List
 DIM	 D.Menu / Top
 Timer	 Shift + Sleep / Timer
 Eject	 Eject / Surround
 Sleep	 Sleep / Timer
 Menu	 Menu / Home
 RDS/Info	 Info / Angle
 Album Up	 Up
 Album Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 I<	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow


 



 






Originale	Sostituto
 Stop	 Stop / Hold
 >	 >>  / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Loudness	 Subtitle / EQ
 Clock	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Treble	 CH+ / Page+
 Bass	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6



 













 

 





 





 











Originale	Sostituto
 Power	 Power
 Mode	 Picture / Format
 Scan	 Smart / List
 DIM	 D.Menu / Top
 Timer	 Shift + Sleep / Timer
 Eject	 Eject / Surround
 Sleep	 Sleep / Timer
 Menu	 Menu / Home
 RDS/Info	 Info / Angle
 Album Up	 Up
 Album Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 I<	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow













 





 









 

 



Originale	Sostituto
 Stop	 Stop / Hold
 >	 >>  / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Loudness	 Subtitle / EQ
 Clock	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Treble	 CH+ / Page+
 Bass	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6









 



 

 





 







 














Originale	Sostituto
	 Power
	 Picture / Format
	 D.Menu / Top
	 Sleep / Timer
	 Smart / List
	 Shift + Sleep / Timer
	 Menu / Home
	 Info / Angle
	 Mute / Dimmer
	 Subtitle / EQ
	 Display / Media
	 Vol+
	 Vol-
	 CH+ / Page+
	 CH- / Page-
	 << / Tune-
	 Play / Slow

Originale	Sostituto
	 Pause / Step / Freeze
	 I<< / Preset-
	 >> / Tune+
	 Stop / Hold
	 >>  / Preset+
	 OK
	 Up
	 Down
	 Right
	 Left
	 TV/Radio /
	 Eject / Surround
	 AV / Input / RDS
	 1
	 2
	 3
	 4





Originale	Sostituto
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Power DAB/FM	 Shift + Power
 Scan DAB/FM	 Shift + Smart / List
 OK DAB/FM	 Shift + OK
 Album Up	 Shift + Up
 Album Down	 Shift + Down
 Right DAB/FM	 Shift + Right
 Mode DAB/FM	 Shift + Picture / Format
 Left DAB/FM	 Shift + Left
 Menu DAB/FM	 Shift + Menu /
 RDS/Info	 Shift + Info / Angle
 1 DAB/FM	 Shift + 1

Originale	Sostituto
 2 DAB/FM	 Shift + 2
 3 DAB/FM	 Shift + 3
 4 DAB/FM	 Shift + 4
 5 DAB/FM	 Shift + 5
 6 DAB/FM	 Shift + 6
 7 DAB/FM	 Shift + 7
 8 DAB/FM	 Shift + 8
 9 DAB/FM	 Shift + 9
 0 DAB/FM	 Shift + 0
 I< DAB/FM	 Shift + I<< / Preset-
 >I DAB/FM	 Shift + >>I / Preset+
 << DAB/FM	 Shift + << /
 >> DAB/FM	 Shift + >> /
 Program	 Shift + TV/Radio / Program
 Shift DAB/FM	 Shift + AV / Input / RDS

