 

 

 

 



 

 

 


 








 

 

 

 

 

 



 

 

 









 

 

 

 

 







 

 

 

 


 












Originale		Sostituto		Originale		Sostituto	
	Setup		Setup / OPT /		Pause		Pause / Step / Freeze
	Power		Power		Play		Play / Slow
	DVD Menu		D.Menu / Top		OK		OK
	Source		AV / Input / RDS		Radio(Tv)		TV/Radio /
	LCD On/Off		Shift + Power		List		Smart / List
	Exit		Exit / Cancel / Clear		FAV		Fav / Marker / PC
	Stop		Stop / Hold		Info		Info / Angle
	I<<		I<< / Preset-		EPG		Guide / EPG / -/-
	>>I		>>I / Preset+		Subtitle		Subtitle / EQ
	CH+		CH+ / Page+		Audio		Audio / Lang I/II
	Up		Up		Teletext		Text / Goto
	CH-		CH- / Page-		Mute		Mute / Dimmer
	Down		Down		Vol-		Vol-
	Left		Left		Vol+		Vol+
	<<		<< / Tune-		1		1
	>>		>> / Tune+		2		2
	Right		Right		3		3





	Originale	Sostituto	Originale	Sostituto
		4		4
		5		5
		6		6
		7		7
		8		8
		9		9
		0		0
		Back		Back / Return
		Goto		Shift + Text /
		Red/[<>]		Red / Netflix / Search
		Green/Angle		Green / APP / Repeat
		Yellow/Prog		Yellow / YouTube / Repeat
		Blue/Repeat		Blue / Prime Video / Random

