





 





 





 

 
 


 

 

 



 

 
 





Originale	Sostituto
	 Power
	 Stop / Hold
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 [ <> ] Picture / Format
	 Search Shift + Green / APP / REPEAT
	 * HOME Menu / Home
	 TV GUIDE Guide / EPG / -/-
	 LIST List Shift + Smart / List
	 SOURCES Sources RDS AV INPUT AV / Input / RDS
	 SMART Smart Tv Smart / List
	 HOME Home Shift + Menu /
	 TV EXIT Tv/Exit CLEAR EXIT CANCEL Exit / Cancel / Clear
	 RED Red Shift + Red / Netflix / Search

Originale	Sostituto
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 INFO Info / Angle
	 OPTIONS OPT-TOOLS SETUP Setup / OPT /
	 BACK Back / Return
	 MULTIVIEW MEDIA DISPLAY Multiview Display / Media
	 Up
	 Down
	 Left
	 Right
	 OK
	 Vol+
	 Vol-
	 NETFLIX Red / Netflix / Search
	 DIMMER MUTE Mute / Dimmer
	 CH+ CH+ / Page+



