






































Originale	Sostituto
 Power	 Power
 Input	 AV / Input / RDS
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [=]	 Text / Goto
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Vol+	 Vol+
 P+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer

Originale	Sostituto
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [i+]	 Info / Angle
 0	 0
 P<P	 Back / Return
 Hold	 Stop / Hold
 I-II	 Audio / Lang I/II
 [-o-] Active Control	 Smart / List
 [<>]	 D.Menu / Top





















 


 


 
Originale		Sostituto	
	♪/Smart		Sound / Title
	[]/Smart		Picture / Format

Originale		Sostituto	



















Originale	Sostituto
 Power	 Power
 Source	 AV / Input / RDS
 >>	 >> / Tune+
 <<	 << / Tune-
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 [=]	 Text / Goto
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Vol+	 Vol+
 P+	 CH+ / Page+
 Vol-	 Vol-

Originale	Sostituto
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [i+]	 Info / Angle
 0	 0
 P<P	 Back / Return
 I-II	 Audio / Lang I/II
 [<>]	 Picture / Format



 

Originale	Sostituto
 Power	 Power
 Source	 AV / Input / RDS
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 P+	 CH+ / Page+
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3

Originale	Sostituto
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0





Originale	Sostituto
Power	Power
Power AMP	Shift + Power
Source	AV / Input / RDS
>>	>> / Tune+
>> AMP	>>I / Preset+
Red	Red / Netflix / Search
Rec	Rec / Rec Mode
<< AMP	I<< / Preset-
Green	Green / APP / Repeat
<<	<< / Tune-
Yellow	Yellow / YouTube / Repeat
Stop	Stop / Hold
Blue	Blue / Prime Video / Random
Play	Play / Slow
Pause AMP	Pause / Step / Freeze
[=] AMP	Text / Goto
Up AMP	Shift + Up

Originale	Sostituto
Up	Up
Left	Left
Left AMP	Shift + Left
OK	OK
OK AMP	Shift + OK
Right	Right
Right AMP	Shift + Right
Down	Down
Down AMP	Shift + Down
Menu	Menu / Home
Menu AMP	D.Menu / Top
Vol+ AMP	Shift + Smart / List
Vol+	Vol+
P+	CH+ / Page+
P+ AMP	Shift + CH+ /
Vol-	Vol-
Mute AMP	Shift + Mute / Dimmer





Originale	Sostituto
	Mute / Dimmer
	Shift + CH PAGE / CH- /
	CH PAGE / CH- / Page-
	Shift + TV 1 / 1
	1
	Shift + DVD 2 / 2
	2
	Shift + CD-STB 3 / 3
	3
	Shift + VIDEO 4 / 4
	4
	Shift + TAPE 5 / 5
	5
	Shift + TUNER 6 / 6
	6
	Shift + AUX-HDD 7 / 7
	7

Originale	Sostituto
	Shift + USB 8 / 8
	8
	Shift + BLUETOOTH 9 / 9
	9
	ANGLE INFO / Info / Angle
	Shift + HDMI-BAT 0 / 0
	0
	PC FAV MARKER / Fav / Marker / PC
	Shift + HOLD / Stop /
	LANG I/II AUDIO / Audio / Lang I/II
	FORMAT PICTURE / Picture / Format
	LIST SMART / Smart / List
	MEDIA DISPLAY / Display / Media

