












 













 
 







Originale	Sostituto
Standby	Power
CD	3
Tuner	6
Tape	5
AUX	7
Program	TV/Radio /
Tape A/B	Smart / List
Display/Clock	Display / Media
Vol-	Vol-
Vol+	Vol+
I< Preset	I<< / Preset-
Preset >I	>>I / Preset+
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze
<<	<< / Tune-
>>	>> / Tune+

Originale	Sostituto
Tape Rec	Rec / Rec Mode
USB Rec	Shift + Rec / Rec Mode
Snooze	OK
Inc.Surr.	Subtitle / EQ
DIM	Shift + Mute / Dimmer
Sleep/Timer	Sleep / Timer
Timer On/Off	Shift + Sleep / Timer
Bass-	Down
Bass+	Up
Treble-	CH- / Page-
Treble+	CH+ / Page+
USB	8
Mute	Mute / Dimmer





















 












 

 
 


 




 

 




























 


 
 



 





Originale	Sostituto
 Standby	 Power
 CD	 3
 Tuner	 6
 Tape	 5
 AUX	 7
 Repeat	 Green / APP / Repeat
 Program	 TV/Radio /
 Shuffle	 Blue / Prime Video / Random
 Tape A/B	 Smart / List
 Display/Clock	 Display / Media
 Vol-	 Vol-
 Vol+	 Vol+
 I< Preset	 I<< / Preset-
 Preset >I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Originale	Sostituto
 <<	 << / Tune-
 >>	 >> / Tune+
 Tape Rec	 Rec / Rec Mode
 USB Rec	 Shift + Rec / Rec Mode
 Snooze	 OK
 Inc.Surr.	 Subtitle / EQ
 DIM	 Shift + Mute / Dimmer
 Sleep/Timer	 Sleep / Timer
 Timer On/Off	 Shift + Sleep / Timer
 Bass-	 Down
 Bass+	 Up
 Treble-	 CH- / Page-
 Treble+	 CH+ / Page+
 USB	 8
 Mute	 Mute / Dimmer



















 
 





Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 >>	 >> / Tune+
 CD	 3	 Tape Rec	 Rec / Rec Mode
 Tuner	 6	 USB Rec	 Shift + Rec / Rec Mode
 Tape	 5	 Snooze	 OK
 AUX	 7	 Inc.Surr.	 Subtitle / EQ
 Repeat	 Green / APP / Repeat	 DIM	 Shift + Mute / Dimmer
 Program	 TV/Radio /	 Sleep/Timer	 Sleep / Timer
 Tape A/B	 Smart / List	 Timer On/Off	 Shift + Sleep / Timer
 Display/Clock	 Display / Media	 Bass-	 Down
 Vol-	 Vol-	 Bass+	 Up
 Vol+	 Vol+	 Treble-	 CH- / Page-
 I< Preset	 I<< / Preset-	 Treble+	 CH+ / Page+
 Preset >I	 >>I / Preset+	 USB	 8
 Stop	 Stop / Hold	 Mute	 Mute / Dimmer
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 <<	 << / Tune-		

Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 >>	 >> / Tune+
 CD	 3	 Tape Rec	 Rec / Rec Mode
 Tuner	 6	 USB Rec	 Shift + Rec / Rec Mode
 Tape	 5	 Snooze	 OK
 AUX	 7	 Inc.Surr.	 Subtitle / EQ
 Repeat	 Green / APP / Repeat	 DIM	 Shift + Mute / Dimmer
 Program	 TV/Radio /	 Sleep/Timer	 Sleep / Timer
 Tape A/B	 Smart / List	 Timer On/Off	 Shift + Sleep / Timer
 Display/Clock	 Display / Media	 Bass-	 Down
 Vol-	 Vol-	 Bass+	 Up
 Vol+	 Vol+	 Treble-	 CH- / Page-
 I< Preset	 I<< / Preset-	 Treble+	 CH+ / Page+
 Preset >I	 >>I / Preset+	 USB	 8
 Stop	 Stop / Hold	 Mute	 Mute / Dimmer
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 <<	 << / Tune-		





Originale	Sostituto	
Standby		Power
Mute		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Tape Rec		Rec / Rec Mode
<<		<< / Tune-
>>		>> / Tune+
I< Preset		I<< / Preset-
Preset >I		>>I / Preset+
Inc.Surr.		Subtitle / EQ
Sleep/Timer		Sleep / Timer
Program		TV/Radio /
Bass+		Up
USB Del USB	 + 	Shift + Smart / List
Snooze		OK
Bass-		Down

Originale	Sostituto	
Vol+		Vol+
Tape A/B		Smart / List
Treble+		CH+ / Page+
Vol-		Vol-
Display/Clock		Display / Media
Treble-		CH- / Page-
CD		3
Tape		5
Tuner		6
AUX		7
USB		8
Repeat		Green / APP / Repeat
Shuffle		Blue / Prime Video / Random
DIM	 + 	Shift + Mute / Dimmer
Play USB	 + 	Shift + Play /
Pause USB	 + 	Shift + Pause / Step /
Stop USB	 + 	Shift + Stop /

Hold





Originale	Sostituto	
USB Rec	SHIFT + REC MODE	Shift + Rec / Rec Mode
<< USB	SHIFT + TUNE-	Shift + << /
>> USB	SHIFT + TUNE+	Shift + >> /
I< Preset USB	SHIFT + PRESET-	Shift + I<< / Preset-
Preset >I USB	SHIFT + PRESET+	Shift + >>I / Preset+
Timer On/Off	SHIFT + SLEEP	Shift + Sleep / Timer
Program USB	SHIFT + PROGRAM TV/RADIO	Shift + TV/Radio / Program
Display/Clock USB	SHIFT + MEDIA DISPLAY	Shift + Display / Media
Repeat USB	SHIFT + APP REPEAT	Shift + Green / APP /
Shuffle USB	SHIFT + Prime Video RANDOM	Shift + Blue / Prime

Originale	Sostituto

