

 



 









 





 

 













 

 

 

 

 

 

 





 





 

 

 

 
 




 

Originale	Sostituto
 Power	 Power
 Sleep	 Sleep / Timer
 Mute	 Mute / Dimmer
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 Audio/Lang	 Audio / Lang I/II
 4	 4
 5	 5
 6	 6
 Tv/Radio	 TV/Radio /
 7	 7
 8	 8
 9	 9
 Exit	 Exit / Cancel / Clear
 CH.List	 Smart / List

Originale	Sostituto
 0	 0
 Back	 Back / Return
 Menu	 Menu / Home
 CH-	 CH- / Page-
 Up	 Up
 CH+	 CH+ / Page+
 Left	 Left
 Enter	 OK
 Right	 Right
 Vol-	 Vol-
 Down	 Down
 Vol+	 Vol+
 Setup	 Setup / OPT /
 Play/Timeshift	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Eject	 Eject / Surround





Originale	Sostituto
 REC	 Rec / Rec Mode
 Text	 Text / Goto
 <<<	 <<< / Tune-
 >>>/Reveal	 >>> / Tune+
 I<<</Hold	 I<<< / Preset-
 >>>I/Sub.P	 >>>I / Preset+
 SUB.T	 Subtitle / EQ
 Index/Title	 Shift + Sound / Title
 Size/Zoom	 Zoom / Size
 D.Menu	 D.Menu / Top
 EPG	 Guide / EPG / -/--
 FAV/Prog	 Fav / Marker / PC
 P.Mode/Lang	 Picture / Format
 S.Mode/Search	 Sound / Title
 Info/Display	 Info / Angle
 Red/Angle	 Red / Netflix / Search
 Green/Slow	 Green / APP / Repeat

Originale	Sostituto
 Yellow/A-B	 Yellow / YouTube / Repeat
 Blue/Repeat	 Blue / Prime Video / Random

