




 



 







 

 

 

 

 

 







 

 











Originale	Sostituto
 Power	 Power
 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 I<<	 I<< / Preset-
 Green/[]	 Green / APP / Repeat
 Stop	 Stop / Hold
 Yellow	 Yellow / YouTube / Repeat
 Play/[≡]	 Play / Slow
 Blue/[■]	 Blue / Prime Video / Random
 >>I	 >>I / Preset+
 AV/[?]	 AV / Input / RDS
 I-II/[≡]	 Audio / Lang I/II
 [<>]/[+]	 Picture / Format
 [-S-]	 Zoom / Size
 Menu	 Menu / Home
 [≡]	 Text / Goto
 Pause	 Pause / Step / Freeze

Originale	Sostituto
 Left	 Left
 Up	 Up
 Right	 Right
 OK	 OK
 Down	 Down
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 Smart ♪	 Sound / Title
 P-	 CH- / Page-
 Smart []	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Originale

Sostituto

6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
[i+]	[i+]	ANGLE INFO	Info / Angle
0	0	HDMI - BAT 0	0
P/P	P<P	PC FAV MARKER	Fav / Marker / PC

Originale

Sostituto





Originale	Sostituto	Originale	Sostituto
0	 Eject / Surround		[≡]
-0-	 Subtitle / EQ		Left
Power	 Power		Up
Rec	 Rec / Rec Mode		Right
I<<	 I<< / Preset-		OK
Red	 Red / Netflix / Search		Down
Green/[[]]	 Green / APP / Repeat		Vol+
Stop	 Stop / Hold		Mute
Play	 Play / Slow		P+
Yellow / List	 Yellow / YouTube / Repeat		Vol-
>>I	 >>I / Preset+		Smart J
AV/[?]	 AV / Input / RDS		P-
I-II/[≡≡]	 Audio / Lang I/II		Smart []
[<>]/[+]	 Zoom / Size		1
PIP [■]	 Picture / Format		2
Menu	 Menu / Home		3
Pause	 Pause / Step / Freeze		4

Originale	Sostituto	Originale	Sostituto
	Text / Goto		Text / Goto
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	Vol+		Vol+
	Mute / Dimmer		Mute / Dimmer
	CH+ / Page+		CH+ / Page+
	Vol-		Vol-
	Sound / Title		Sound / Title
	CH- / Page-		CH- / Page-
	Smart / List		Smart / List
	1		1
	2		2
	3		3
	4		4




 



 
 

 






 

 

 



 
 


	Originale	Sostituto	Originale	Sostituto
	 5	 5		
	 6	 6		
	 7	 7		
	 8	 8		
	 9	 9		
	 [i+]	 Info / Angle		
	 0	 0		
	 P<P	 Fav / Marker / PC		





Originale	Sostituto	Originale	Sostituto
	Power		Power
	-0-		Subtitle / EQ
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	AV/[?]		AV / Input / RDS
	I-II/[≡ ≡]		Audio / Lang I/II
	[<>]/[+]		Zoom / Size
	Pause		Pause / Step / Freeze
	[≡]		Text / Goto
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

Originale	Sostituto	Originale	Sostituto
	Vol-		Vol-
	Smart J		Sound / Title
	P-		CH- / Page-
	Smart []		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P<P		Fav / Marker / PC

