 

 





Originale	Sostituto
 Standby/On	 Power
 HDD/DVD	 Smart / List
 I<</Prev	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 I>>/Next	 I>> / Preset+
 I<</II/I<	 I<< / Tune-
 Play	 Play / Slow
 I>>/II/I>	 I>> / Tune+
 Help	 Setup / OPT /
 Rec	 Rec / Rec Mode
 Stop Rec	 Shift + Stop /
 Info	 Info / Angle
 Disc Navigator/Top	 D.Menu / Top
 Home Menu	 Shift + Menu /
 Guide	 Guide / EPG / -/--
 Up	 Up

Originale	Sostituto
 CH+	 CH+ / Page+
 CM Back	 Fav / Marker / PC
 Left	 Left
 Enter	 OK
 Right	 Right
 CH-	 CH- / Page-
 CM Skip	 Zoom / Size
 ATV/DTV	 TV/Radio /
 Down	 Down
 Return/Exit	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Pause Line Tv	 Shift + Pause / Step /
 Timer Rec	 Sleep / Timer
 Rec Mode	 Shift + Rec / Rec Mode





Originale	Sostituto
One Touch	Picture / Format
O)))/Audio	Audio / Lang I/II
[...] /Subtitle	Subtitle / EQ
Camera/Angle	Shift + Info / Angle
Input Select	AV / Input / RDS
1	1
2	2
3	3
Menu	Menu / Home
4	4
5	5
6	6
Display	Display / Media
7	7
8	8
9	9
+	Sound / Title

Originale	Sostituto
0	0
Clear	Exit / Cancel / Clear
Power Tv Control	Shift + Power
CH+ Tv Control	Shift + CH+ /
Vol+ Tv Control	Vol+
Text	Text / Goto
Input Select Tv Control	Shift + AV / Input / RDS
CH- Tv Control	Shift + CH- /
Vol- Tv Control	Vol-
Tv/DVD	Shift + TV/Radio / Program

