





Originale	Sostituto
 Standby/On	 Power
 Continued	 3D
 Open/Close	 Eject
 Audio	 Dual
 Subtitle	 Subt
 Angle	 TV/R
 FL Dimmer	 Rec
 CD/SACD	 Guide
 HDMI	 Options
 Top Menu	 Shift + Menu
 Exit	 Exit
 Function	 D. Menu
 Home Media	 Media
 Menu/PopUp	 Menu
 Home Menu	 Smart
 Return	 Back
 Up	 Up

Originale	Sostituto
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Red/Program	 Red
 Green/Bookmar	 Green
 Yellow/Zoom	 Yellow
 Blue/Index	 Blue
 Play	 Play
 >>	 >>
 <<	 <<
 I<</>I</>	 I<<
 Pause	 Pause
 Stop	 Stop
 >>I/I>>	 >>I
 1	 1
 2	 2





Originale		Sostituto		Originale		Sostituto	
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Clear	+	Shift + Exit				
	2nd Video		Format				
	Keylook		Sleep				
	Replay		Pre Ch				
	A-B		List				
	Repeat		Text				
	2nd Audio	+	Shift + Dual				
	-->/Skip Search		AV				
	Display		Info				





Originale	Sostituto
 Power Tv Control	 Power
 Input Select Tv Control	 AV
 CH+ Tv Control	 Ch +
 CH- Tv Control	 Ch -
 Vol+ Tv Control	 Vol +
 Vol- Tv Control	 Vol -
 Power Receiver	 Shift + Power
 BD	 Smart
 Vol+ Receiver Control	 Shift + Vol +
 Input ← Receiver Control	 Left
 Input → Receiver Control	 Right
 Vol- Receiver Control	 Shift + Vol -

Originale	Sostituto

