



Originale		Sostituto		Originale		Sostituto	
	Power Receiver		Power		3 Tuner		Shift + 3
	DVD		2		HDMI Out		AV / Input / RDS
	BD		1		4 Tuner		Shift + 4
	DVR		5		Signal Sel		Shift + Setup / OPT / Tools
	HDMI		0		MCACC		Fav / Marker / PC
	TV		TV/Radio /		5 Tuner		Shift + 5
	CD		3		6 Tuner		Shift + 6
	CD-R		9		Sleep		Sleep / Timer
	Home Media		Shift + Menu /		7 Tuner		Shift + 7
	iPod / USB		8		SBch		Eject / Surround
	Tuner		6		8 Tuner		Shift + 8
	Video 1		4		A.ATT.		Yellow / YouTube / Repeat
	Video 2		7		9 Tuner		Shift + 9
	↶ Input Select		Shift + Left		Dimmer		Shift + Mute / Dimmer
	1 Tuner		Shift + 1		D.Access		Shift + D.Menu / Top Menu
	Input Select ↷		Shift + Right		CH Level		Shift + CH+ /
	2 Tuner		Shift + 2		0 Tuner		Shift + 0





Originale	Sostituto
Class	Shift + Display / Media
Enter (Class)	Shift + OK
Master Volume	Vol+
Master Volume	Vol-
Mute	Mute / Dimmer
Top Menu	D.Menu / Top
Band	Subtitle / EQ
Audio	Audio / Lang I/II
Tune+	Shift + >> /
Up	Up
Tools	Setup / OPT /
T.Edit	Text / Goto
Video	Picture / Format
Left	Left
Preset -	Shift + << / Preset-
Enter	OK
Preset +	Shift + >> / Preset+

Originale	Sostituto
Right	Right
iPod CTRL	Smart / List
Home Menu	Menu / Home
Tune-	Shift + << /
Down	Down
Return	Back / Return
Auto / Alc / Direct	Info / Angle
Stereo	Sound / Title
Repeat	Green / APP / Repeat
Standard	Shift + Smart / List
Random	Blue / Prime Video / Random
Adv. Surr.	Guide / EPG / -/-
<< / Tune-	<< / Tune-
Phase CTRL	Red / Netflix / Search
Play	Play / Slow
>> / Tune+	>> / Tune+
Status	Exit / Cancel / Clear







	Originale	Sostituto
	I<<	I<< / Preset-
	Pause	Pause / Step / Freeze
	MPX	Zoom / Size
	PQLS	+  Shift + Info / Angle
	Stop	Stop / Hold
	>>I	>>I / Preset+
	Audio DVD	+  Shift + Audio / Lang I/II
	Disp	Display / Media
	CH -	CH- / Page-
	CH +	CH+ / Page+

	Originale	Sostituto





Originale	Sostituto
Power Source	Power
DVD	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Top Menu	D.Menu / Top
Up	Up
Left	Left
Enter	Shift + OK
Enter	OK

Originale	Sostituto
Right	Right
Down	Down
Return	Back / Return
Menu	Menu / Home
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
Stop	Stop / Hold
>>I	>>I / Preset+
Audio	Audio / Lang I/II







Originale	Sostituto
Power Source	Power
Tuner	Shift + 6
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
D.Access	D.Menu / Top
0	0
Class	CH- / Page-
Master Volume	Vol+
Master Volume	Vol-
Mute	Mute / Dimmer

Originale	Sostituto
Band	Smart / List
Tune+	>> / Tune+
Tune-	Up
T.Edit	Text / Goto
Preset-	Left
Preset-	I<< / Preset-
Enter	OK
Preset+	>>I / Preset+
Preset+	Right
Search	Red / Netflix / Search
Tune-	<< / Tune-
Tune-	Down
Menu	Menu / Home
MPX	CH+ / Page+
Disp	Display / Media

