



Originale	Sostituto
 Power	 Power
 [i+]/Timer	 Info / Angle
 [i+]/Timer	 Sleep / Timer
 Input 1	 Shift + 1
 Input 2	 Shift + 2
 Input 3	 Shift + 3
 Input 4	 Shift + 4
 PC	 Shift + Fav / Marker / PC
 Screen Split	 Shift + Red / Netflix /
 Screen Swap	 Shift + Green / APP /
 PIP Swap	 Shift + Yellow / YouTube /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Originale	Sostituto
 7	 7
 8	 8
 9	 9
 CH Return	 Guide / EPG / -/--
 0	 0
 CH Enter	 Fav / Marker / PC
 P+	 CH+ / Page+
 I-II	 Audio / Lang I/II
 Vol+	 Vol+
 P-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Return	 Back / Return
 Up	 Up
 Home Menu	 Menu / Home
 Left	 Left
 Enter	 OK





Originale	Sostituto
Right	Right
Down	Down
AV Selection	AV / Input / RDS
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
[I+]/[≡ ♦]	Setup / OPT /
[<>]	Picture / Format
[...]	Subtitle / EQ
[≡ ?]	D.Menu / Top
[≡ i]	Display / Media
[≡]	Text / Goto

Originale	Sostituto

