



Originale	Sostituto
Power Receiver	Power
Input Select	AV / Input / RDS
DVD / LD	Shift + 2
TV/SAT	Shift + 1
TV/SAT	Shift + 0
DVR/VCR	Shift + 4
CD	Shift + 3
CD-R/Tape	Shift + 5
TUNER	Shift + 6
Standard	Red / Netflix / Search
Advanced	Green / APP / Repeat
Stereo / Direct	Yellow / YouTube / Repeat
Midnight /	Blue / Prime Video / Random
CH. Select	Shift + OK
Level -	Shift + Down
Level +	Shift + Up
Test Tone	Text / Goto

Originale	Sostituto
Mute	Mute / Dimmer
Effect -	Shift + Left
Effect +	Shift + Right
FL Dimmer	Shift + Mute / Dimmer
Master Volume-	Vol-
Master	Vol+
Top Menu	D.Menu / Top
Up	Up
Menu	Menu / Home
Left	Left
Enter	OK
Right	Right
Audio	Audio / Lang I/II
Down	Down
Sleep	Sleep / Timer
Guide	Shift + Guide / EPG / -/-
<<	<< / Tune-





Originale	Sostituto
Play	Play / Slow
>>	>> / Tune+
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
Stop	Stop / Hold
>>I	>>I / Preset+
1	1
2	2
3	3
Enter / Disc	Fav / Marker / PC
4	4
5	5
6	6
·/+10	Guide / EPG / -/--
7	7
8	8
9	9

Originale	Sostituto
0	0
Channel+	CH+ / Page+
Channel-	CH- / Page-
Setup	Setup / OPT /



 

 




















 



 





 









 



Originale	Sostituto
Power Source	Power
DVDLD	Shift + 2
Top Menu	D.Menu / Top
Up	Up
Menu	Menu / Home
Left	Left
Enter	OK
Right	Right
Audio	Audio / Lang I/II
Down	Down
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
Stop	Stop / Hold
>>I	>>I / Preset+

Originale	Sostituto
1	1
2	2
3	3
Enter / Disc	Fav / Marker / PC
4	4
5	5
6	6
+10	Guide / EPG / -/-
7	7
8	8
9	9
0	0





Originale	Sostituto
 Power Source	 Power
 Tuner	 Shift + 6
 Tune+	 >> / Tune+
 Tune+	 Up
 Menu	 Menu / Home
 ST-	 Left
 Enter	 OK
 ST+	 Right
 Tune-	 << / Tune-
 Tune-	 Down
 Display	 Display / Media
 Class	 Pause / Step / Freeze
 MPX	 Stop / Hold
 D.Access	 >>I / Preset+
 1	 1
 2	 2
 3	 3

Originale	Sostituto
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

