



Originale	Sostituto
Receiver Power	Power
Input Select-	CH- / Page-
Input Select+	CH+ / Page+
TV Control Input	Shift + AV / Input / RDS
TV Control Power	Shift + Power
BD	2
TV	1
DVR	5
TV Control CH+	Shift + CH+ /
CD	3
CD-R	9
TUNER	6
TV Control CH-	Shift + CH- /
VIDEO	4
AUX	7
TV Control Vol+	Shift + Vol+
iPod USB	8

Originale	Sostituto
Dimmer	Shift + Mute / Dimmer
Signal Sel	Picture / Format
TV Control Vol-	Shift + Vol-
Auto / Direct	Red / Netflix / Search
Stereo / ALC	Green / APP / Repeat
Standard	Yellow / YouTube / Repeat
Adv Surr	Blue / Prime Video / Random
Audio	Audio / Lang I/II
Master	Vol+
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Master Volume-	Vol-
Setup	Setup / OPT /
Return	Back / Return









Originale	Sostituto
Power Source	Power
Tuner	Shift + 6
Menu	Menu / Home
Master Volume	Vol+
Tune+	>> / Tune+
Tune+	Up
Preset-	<< / Preset-
Preset-	Left
Enter	OK
Preset+	>>  / Preset+
Preset+	Right
Tune-	<< / Tune-
Tune-	Down
Master Volume	Vol-
Search	Red / Netflix / Search
Band	Subtitle / EQ
Mute	Mute / Dimmer

Originale	Sostituto
1	1
2	2
3	3
Display	Display / Media
4	4
5	5
6	6
7	7
8	8
9	9
0	0









Originale	Sostituto
Receiver Power	Power
Input Select-	CH- / Page-
Input Select+	CH+ / Page+
TV Control Input	Shift + AV / Input / RDS
TV Control Power	Shift + Power
BD	2
TV	1
DVR	5
TV Control CH+	Shift + CH+ /
CD	3
CD-R	9
TUNER	6
TV Control CH-	Shift + CH- /
VIDEO	4
AUX	7
TV Control Vol+	Shift + Vol+
iPod USB	8

Originale	Sostituto
Dimmer	Shift + Mute / Dimmer
Signal Sel	Picture / Format
TV Control Vol-	Shift + Vol-
Auto / Direct	Red / Netflix / Search
Stereo / ALC	Green / APP / Repeat
Standard	Yellow / YouTube / Repeat
Adv Surr	Blue / Prime Video / Random
Audio	Audio / Lang I/II
Master	Vol+
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Master Volume-	Vol-
Setup	Setup / OPT /
Return	Back / Return



