











 

 

 



 






 

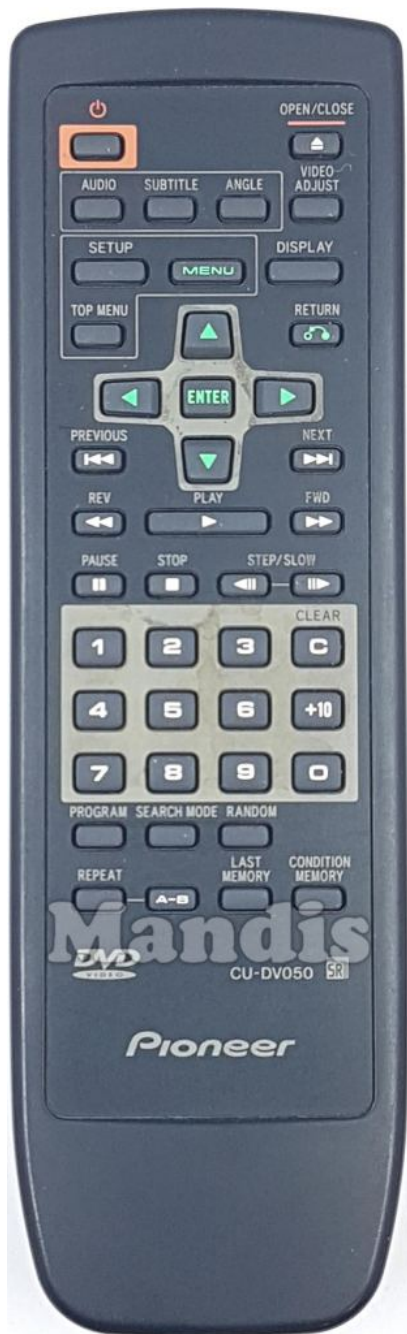 


 




 




Originale	Sostituto
 Power	 Power
 Open/Close	 Eject / Surround
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Video Adjust	 Smart / List
 Setup	 Setup / OPT /
 Menu	 Menu / Home
 Display	 Display / Media
 Top Menu	 D.Menu / Top
 Up	 Up
 Return	 Back / Return
 Left	 Left
 Enter	 OK
 Right	 Right
 I<<	 I<< / Preset-
 Down	 Down

Originale	Sostituto
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <II Step/Slow	 CH- / Page-
 Step/Slow II>	 CH+ / Page+
 1	 1
 2	 2
 3	 3
 Clear	 Exit / Cancel / Clear
 4	 4
 5	 5
 6	 6
 +10	 Guide / EPG / -/-
 7	 7





Originale		Sostituto		Originale	Sostituto
	8		8		
	9		9		
	0		0		
	Program		TV/Radio /		
	Search Mode		Red / Netflix / Search		
	Random		Blue / Prime Video / Random		
	Repeat		Green / APP / Repeat		
	Last Memory		Picture / Format		
	Condition Memory		Fav / Marker / PC		
	A-B		Yellow / YouTube / Repeat		

