 

 

 



 



 

 

 


 
 



 



 

 

 

 

 

 

 

 



 

 

 

 

 

 





	Originale	Sostituto		Originale	Sostituto
	Vol+	 Vol+		Random	 Blue / Prime Video / Random
	Vol-	 Vol-		AUX →	 OK
	Power	 Power		Tape I-II	 5
	Mono	 Audio / Lang I/II		Band	 D.Menu / Top
	Sleep	 Sleep / Timer		CD	 Shift + 3
	Disc Change	 AV / Input / RDS		Play/Track	 Play / Slow
	Open/Close	 Eject / Surround		Pause	 Pause / Step / Freeze
	Display	 Display / Media		I<</Track	 I<< / Preset-
	Morphing	 Subtitle / EQ		>>/Track	 >> / Preset+
	←0	 Left		Stop	 Stop / Hold
	0→	 Right		<<	 << / Tune-
	Disc 1	 1		>>	 >> / Tune+
	Disc 2	 2			
	Disc 3	 3			
	Clear	 Exit / Cancel / Clear			
	PGM	 TV/Radio /			
	Repeat	 Green / APP / Repeat			

