


 

 





 

 

 



 



 

 





 
 











 
 



 



 



 









 


 
 



 

 

 
















Originale		Sostituto		Originale		Sostituto	
	Power		Power		6		6
	Mute		Mute		7		7
	[<>]		Format		8		8
	♪		Dual		9		9
	[ ]		3D		0		0
	PAT		Smart		Zoom		Eject
	PIP Sel		Play		Swap		Pre Ch
	PIP Pos		Pause		Swap		Back
	PIP Size		Stop		PR-		Ch -
	AV		AV		PR+		Ch +
	PC		Media		Vol-		Vol -
	TV		TV/R		Vol+		Vol +
	1		1		Up		Up
	2		2		Right		Right
	3		3		Down		Down
	4		4		Left		Left
	5		5		OK / Freeze		Ok





	Originale	Sostituto	Originale	Sostituto
	Info	 DISPLAY INFO		
	Menu	 TOP MENU MENU		
	[+]	 SETTINGS OPT		
	[?]	 E-MANUAL D.MENU		
	[♦]	 AD SUBT		
	Red	 A		
	Green	 B		
	Yellow	 C		
	Blue	 D		
	Text / Mix	 REPEAT TEXT		
	[≡x]	 CLEAR EXIT		
	[::≡]	 -/-- GUIDE		

