



















 








 


 


 
 


Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Rec	 Rec / Rec Mode
 Tv/Radio	 TV/Radio /	 Stop	 Stop / Hold
 Red	 Red / Netflix / Search	 I<<	 I<< / Preset-
 Green	 Green / APP / Repeat	 FAV	 Fav / Marker / PC
 Yellow	 Yellow / YouTube / Repeat	 >>I/Index	 >>I / Preset+
 Blue	 Blue / Prime Video / Random	 Menu	 Menu / Home
 Subtitle	 Subtitle / EQ	 Up	 Up
 Text	 Text / Goto	 Source	 AV / Input / RDS
 Hold	 Shift + Stop /	 Left	 Left
 TVG	 Guide / EPG / -/--	 OK	 OK
 Audio	 Audio / Lang I/II	 Right	 Right
 Play	 Play / Slow	 Down	 Down
 Pause	 Pause / Step / Freeze	 Exit	 Exit / Cancel / Clear
 Size	 Zoom / Size	 Aspect	 Picture / Format
 <<	 << / Tune-	 Vol+	 Vol+
 Subpage	 Eject / Surround	 Mute	 Mute / Dimmer
 >>	 >> / Tune+	 CH+	 CH+ / Page+

Originale	Sostituto	Originale	Sostituto
 Rec	 Rec / Rec Mode	 Stop	 Stop / Hold
 I<<	 I<< / Preset-	 FAV	 Fav / Marker / PC
 >>I/Index	 >>I / Preset+	 Menu	 Menu / Home
 Up	 Up	 Source	 AV / Input / RDS
 Left	 Left	 OK	 OK
 Right	 Right	 Down	 Down
 Exit	 Exit / Cancel / Clear	 Aspect	 Picture / Format
 Vol+	 Vol+	 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+		





Originale	Sostituto	Originale	Sostituto
 Vol-	 Vol-		
 Display	 Display / Media		
 CH-	 CH- / Page-		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 -/--	 +  Shift + Guide / EPG / -/--		
 0	 0		
 Recall	 Back / Return		

Originale	Sostituto

