 



 



 



 


 



 



 







 



 








 











 

 


 



























Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Jump	 Smart / List
 S.Mode	 Sound / Title	 .	 Display / Media
 MTS	 Text / Goto	 Mute	 Mute / Dimmer
 P.Mode	 Picture / Format	 Input	 AV / Input / RDS
 Caption	 Subtitle / EQ	 Vol+	 Vol+
 Sleep	 Sleep / Timer	 Vol-	 Vol-
 P.Size	 Zoom / Size	 CH+	 CH+ / Page+
 1	 1	 CH-	 CH- / Page-
 2	 2	 Guide	 Guide / EPG / -/-
 3	 3	 Exit	 Exit / Cancel / Clear
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Down	 Shift + Down
 7	 7	 Left	 Left
 8	 8	 OK	 OK
 9	 9	 Info	 Info / Angle
 0	 0	 Menu	 Menu / Home

Originale	Sostituto	Originale	Sostituto
 Power	 Mute / Dimmer	 SHIFT	 TV
 S.Mode	 DVD	 SAT	 AUX
 MTS	 SLOW	 STEP-FREEZE	 HOLD
 P.Mode	 REC MODE	 PLAY	 PAUSE
 Caption	 PRESET-	 TUNE+	 PRESET+
 Sleep	 TITLE	 TUNE-	 EQ
 P.Size	 LANG	 SURROUND	 SOUND
 1	 AUDIO	 SUBTITLE	 FORMAT
 2	 SIZE	 TIMER	 PICTURE
 3	 GOTO	 RDS	 ZOOM
 4	 TV RADIO	 AV INPUT	 SLEEP
 5	 TOP MENU	 D.MENU	 OPT-TOOLS
 6	 SETUP	 TEXT	 GOTO
 7	 HOME	 ANGLE	 RDS
 8	 MENU	 INFO	 AV INPUT
 9	 OK	 RETURN	 EXIT
 0	 CLEAR	 CANCEL	 LIST
	 VOL +	 SMART	 MEDIA
	 VOL -	 DISPLAY	 CH PAGE +
	 CH+	 TV	 DVD
	 CH-	 CD - STB	 VIDEO
	 GUIDE	 TAPE	 TUNER
	 EXIT	 AUX - HDD	 USB
	 Up	 HDMI - BAT	 PC
	 Down	 FAV MARKER	 GUIDE EPG
	 Down	 NETFLIX	 SEARCH
	Left	 APP	 REPEAT
	Left	 YouTube	 REPEAT A-B
	Left	 Prime Video	 RANDOM
	Left	 Mandis SHOP	
	Left	 www.mandis.tv	





Originale		Sostituto		Originale	Sostituto
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	List		Shift + Smart / List		
	FAV CH		Fav / Marker / PC		
	Timer		Shift + Sleep / Timer		
	Freeze		Pause / Step / Freeze		

