



Originale	Sostituto
Power	Power
Input	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Info	Info / Angle
0	0
Recall	Fav / Marker / PC
prime video	Shift + Blue / Prime
Home	Shift + Menu /
YouTube	Shift + Yellow / YouTube / Repeat

Originale	Sostituto
Netflix	Shift + Red / Netflix /
Q.Menu	D.Menu / Top
Up	Up
Menu	Menu / Home
Left	Left
OK/List	OK
Right	Right
Back	Back / Return
Down	Down
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Vol+	Vol+
CH+	CH+ / Page+
Mute	Mute / Dimmer





Originale		Sostituto	
	Vol-		Vol-
	CH-		CH- / Page-
	Guide		Guide / EPG / -/--
	Play/Index		Play / Slow
	Pause		Pause / Step / Freeze
	Stop/Hold		Stop / Hold
	Mix/Rec		Rec / Rec Mode
	I<</Text		I<< / Preset-
	>>I/Size		>>I / Preset+
	Audio Lang/I/II		Audio / Lang I/II
	<</Reveal		<< / Tune-
	>>/FAV		>> / Tune+
	Subtitle		Subtitle / EQ

Originale		Sostituto	

