










 
 



 












 
 
 

 



 

 







 

 



 


















Originale	Sostituto	Originale	Sostituto
 Power	 Power	 PR +	 Up
 Mute	 Mute	 PR -	 Ch -
 1	 1	 PR -	 Down
 2	 2	 Vol +	 Vol +
 3	 3	 Vol +	 Right
 4	 4	 Vol -	 Vol -
 5	 5	 Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 SWAP	 Back
 8	 8	 16:9	 Format
 9	 9	 White / i	 Info
 0	 0	 Red	 Red
 --	 GUIDE	 Green	 Green
 AV / TV	 TV/R	 Yellow	 Yellow
 Menu	 Menu	 Blue	 Blue
 TXT	 Text	 Stop	 Stop
 PR +	 Ch +	 Reveal	 Smart

Originale	Sostituto	Originale	Sostituto
 PR +	 Up	 TV	 AUX
 PR -	 Ch -	 DVD	 SAT
 PR -	 Down	 PLAY MODE	 REC MODE
 Vol +	 Vol +	 Play	 Pause
 Vol +	 Right	 Stop	 Red
 Vol -	 Vol -	 Fast Backward	 Fast Forward
 Vol -	 Left	 SOUND	 AD
 OK	 Ok	 LIST	 SUBT
 SWAP	 Back	 DUAL	 OPT
 16:9	 Format	 SEARCH	 PICTURE
 White / i	 Info	 SLEEP	 ECO
 Red	 Red	 TV/R	 FORMAT
 Green	 Green	 E-MANUAL	 3D
 Yellow	 Yellow	 REPEAT	 TIMER
 Blue	 Blue	 ZOOM	 AV
 Stop	 Stop	 D.MENU	 TEXT
 Reveal	 Smart	 TOP MENU	 DISPLAY INFO





Originale	Sostituto
DOUBLE	Double
SUB	SUB
MIX	MIX
Update	Update

Originale	Sostituto

