










 




 
 




 

 






 
 

 






Originale	Sostituto
 Standby	 Power
 Mute	 Mute
 ATV	 Smart
 Tv/Radio	 TV/R
 Tv Guide	 Guide
 USB	 Media
 Rec	 Rec
 I<<	 I<<
 >>I	 >>I
 Stop	 Stop
 <<	 <<
 >>	 >>
 Play	 Play
 Pause	 Pause
 Rec List	 List
 AV/Source	 AV
 i/Info	 Info

Originale	Sostituto
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0



