



Originale	Sostituto
	Mute / Dimmer
	Up
	Power
	Left
	OK
	Right
	Menu / Home
	Down
	Info / Angle
	1
	2
	3
	4
	5
	6
	7
	8

Originale	Sostituto
	9
	Smart / List
	0
	CH+ / Page+
	Back / Return
	Vol-
	Vol+
	CH- / Page-
	Shift + Back / Return
	TV/Radio /
	Fav / Marker / PC
	AV / Input / RDS
	Shift + CH+ /
	Red / Netflix / Search
	Green / APP / Repeat
	Shift + CH- /
	Yellow / YouTube / Repeat





Originale		Sostituto	
	Blue		Blue / Prime Video / Random
	Screen		Picture / Format
	Lang		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Sleep		Sleep / Timer
	[ ≡ ]		Text / Goto
	[ ≡ X ]		Exit / Cancel / Clear
	EPG		Guide / EPG / -/-
	[ ■ ] [ ■ ■ ]		Display / Media

Originale		Sostituto	

