 





 

 

 



























Originale	Sostituto
 Standby	 Power
 Eject	 Eject / Surround
 Source	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0

Originale	Sostituto
 Recall/+10	 Back / Return
 FAV/Program	 Fav / Marker / PC
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 D.Setup	 Setup / OPT /
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Vol-	 Vol-
 Vol+	 Vol+
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Red/Goto	 Red / Netflix / Search
 Green/A-B	 Green / APP / Repeat





Originale		Sostituto		Originale		Sostituto	
	Yellow/Angle		Yellow / YouTube / Repeat		Rec		Rec / Rec Mode
	Blue/Repeat		Blue / Prime Video / Random		Timeshift		Shift + Sleep / Timer
	Play/Hold		Play / Slow		Tv/Radio		TV/Radio /
	Pause		Pause / Step / Freeze				
	Stop/Reveal		Stop / Hold				
	Size/Aspect		Zoom / Size				
	Subtitle		Subtitle / EQ				
	<<		<< / Tune-				
	Text		Text / Goto				
	>>/Subpage		>> / Tune+				
	SCR/Title		Shift + Sound / Title				
	Slow/EPG		Guide / EPG / -/--				
	I<</Index		I<< / Preset-				
	>>I/Mix		>>I / Preset+				
	D.Menu		D.Menu / Top				
	I/II/Audio		Audio / Lang I/II				
	Media		Shift + Display / Media				

