

 

 

 
 
 
 


 


 
 
 

 
 
 
 
 
 



 



 


 
 



 
 

 

 


 


 
 


 
 
 


 


 






 

 

 

 



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Right		Right
	Mute		Mute		Down		Down
	Rec List		Smart		Left		Left
	CH / List		Media		OK		Ok
	Subtitle		Subt		Menu		Menu
	Repeat		Shift + Text		Exit		Exit
	Rec		Rec		1		1
	Stop		Stop		2		2
	I<<		I<<		3		3
	>>I		>>I		4		4
	Pause		Pause		5		5
	Play		Play		6		6
	<<		<<		7		7
	>>		>>		8		8
	Source		AV		9		9
	Display		Info		0		0
	Up		Up		Recall		Back





Originale	Sostituto
	 Pre Ch
	 Vol +
	 Vol -
	 Format
	 Shift + Dual
	 Guide
	 Sleep
	 Ch +
	 Ch -
	 Red
	 Green
	 Yellow
	 Blue
	 Text
	 Shift + Exit
	 TV/R
	 Dual

Originale	Sostituto
	 Shift + Pause
	 Eject
	 Shift + Subt
	 Shift + Info

