


 

 

 


 

 

 

 















Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 DTV / ATV	 D.Menu / Top
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Originale	Sostituto
 Vol +	 Vol+
 MTS	 Audio / Lang I/II
 CH +	 CH+ / Page+
 Vol -	 Vol-
 RECLIST	 Smart / List
 CH -	 CH- / Page-
 FAV List	 Fav / Marker / PC
 REC	 Rec / Rec Mode
 Freeze	 Pause / Step / Freeze
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down





Originale	Sostituto	Originale	Sostituto
DISPLAY	Display	MEDIA DISPLAY	Display / Media
	Red	NETFLIX SEARCH	Red / Netflix / Search
	Green	APP REPEAT	Green / APP / Repeat
	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
	Blue	Prime Video RANDOM	Blue / Prime Video / Random
GUIDE	<< / Guide	TUNE-	<< / Tune-
GUIDE	<< / Guide	GUIDE EPG	Guide / EPG / -/--
TIMESHIFT	Play/Pause / Timeshift	SLOW	Play / Slow
ASPECT	>> / Aspect	TUNE+	>> / Tune+
CANCEL	<< / Cancel	PRESET-	<< / Preset-
SUB.PG	>> / Subpage	PRESET+	>> / Preset+
INDEX	Stop / Index	ANGLE INFO	Info / Angle
INDEX	Stop / Index	HOLD	Stop / Hold
TV/RADIO	TV / Radio	PROGRAM TV/RADIO	TV/Radio /
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
REVEAL	Reveal	OPT-TOOLS SETUP	Setup / OPT /
SIZE	Size	SIZE ZOOM	Zoom / Size
HOLD	Hold	SHIFT + HOLD	Shift + Stop /
TEXT	Text	GOTO TEXT	Text / Goto

